

# ELTRIM

open to discharge  
auto rec. C


Date: mm/yy  
2000/07/16.0

Rev.: 01.0.1.05  
Ed.: 1.2

Press the switch




Steering control - automatic off  
Open or pressure going up

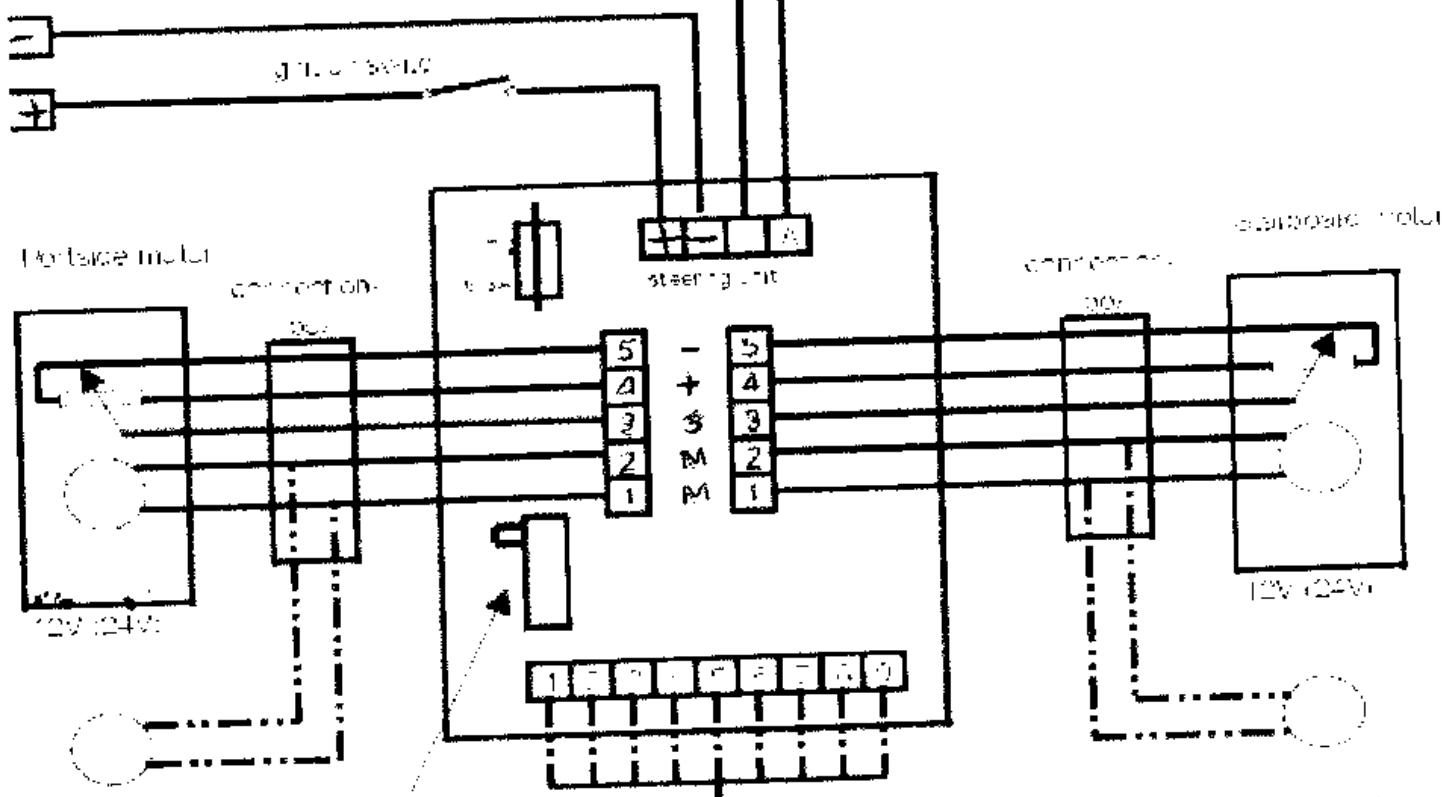

2. motor connection  
core "A" and "B" to Y

Charge sig.  
OL-going out.  
UF-going out  
with tank going up  
automatically

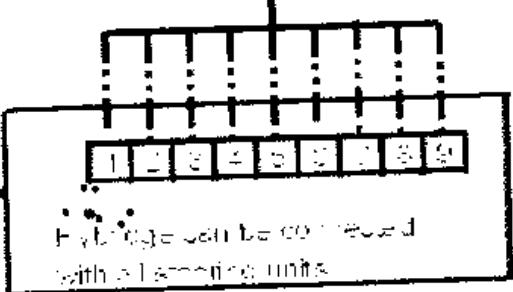

You may mount the bridge unit at any position.  
For steering unit cut a hole of 100 x 110 mm.  
Before mounting the steering unit,  
remove coverpaper from front seal.