


## *BD04* original bar-graph driver

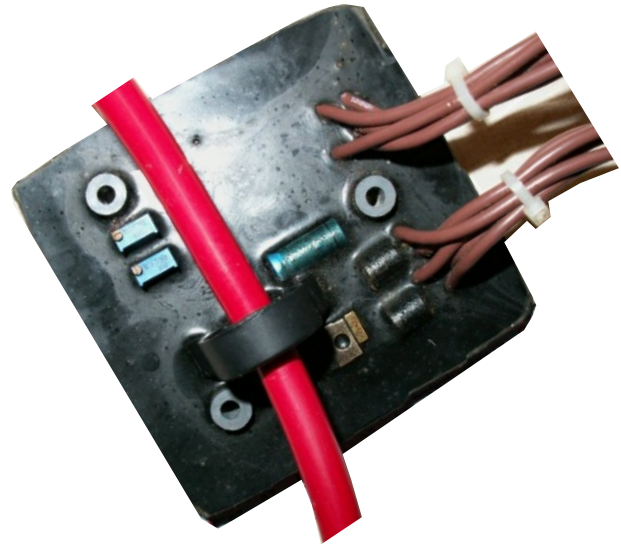

amperage ..... 30 amp nominal  
monitoring ..... net amps service battery  
signal volts ..... 5.0 volt @ 0 amp  
power terminals .... none, cable through  
display terminals .. 2 x 6 way connector  
replacement ..... **B4/1**

fitted to

**Sealine** .... 260 Se, 350 St, 380 Am

### Notes

Bar-driver measures magnetic field around power cable, and has infinite overload.

Provides signal to bar-graph display of net amps ( charge / discharge ) for the service battery.

The unit also supplies voltages to the digital voltmeter display in switch panel, and power feed from both battery banks to the link start relay.